
J-1 and J-2 Parts Diagram

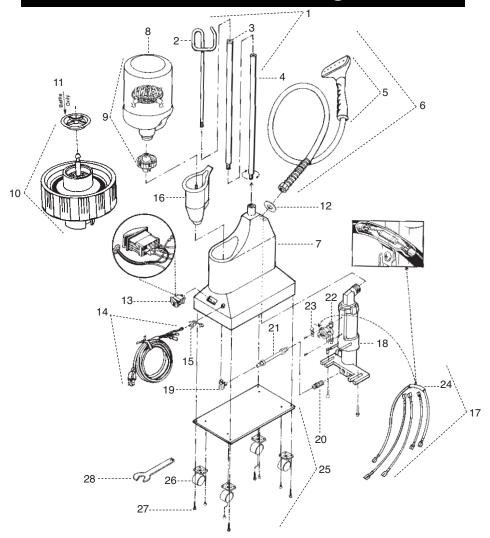

Should you ever need replacement parts for your Jiffy® Steamer, you may purchase them separately. Use this diagram and parts list to identify any part you may need. Please include model and serial number when ordering.


| | Jiffy Steamer | |
|------|---------------|--|
| Key# | Part # | Part Description |
| 1 | 1029 | Rod Set Complete with Threaded Bottom Section |
| | 1030 | Rod Set and Nut Complete with Metal Studs (pre August 2021 models) |
| | 0031 | Hose Hanger Rod Set with Adapter Complete |
| | 0031A | Hose Hanger Rod Set without Adapter Complete |
| | 0041 | Base Adapter with Thumb Screw (for Old Style Rods Sets) |
| 2 | 0035 | Hook Section of Rod Set |
| _ 3 | 0036 | Middle Section of Rod Set |
| 4 | | |

11

J-1 and J-2 Parts Diagram Key

| | Jiffy Steamer | | |
|--|----------------|---|--|
| Key# | Part # | Part Description | |
| 4 | 1033 | Bottom Section of Rod Set (with Nut Attached) (pre August 2021 models) | |
| | 0037 | Bottom Section of Rod Set (without Nut) | |
| | 1028 | Bottom Section of Rod Set with Threads Matel Threaded Con Serow for Rod Set | |
| | 0043 0039 | Metal Threaded Cap Screw for Rod Set Metal Threaded Stud for Rod Sections | |
| 5 | 0253 | Plastic Steam Head/Handle Replacement Kit | |
| 6 | 0251 | Plastic Head/Handle Hose Attachment Complete | |
| - | 0280 | Hose Per Foot (Black in Color) | |
| 7 | 0003B 0003C | Painted Die Cast Aluminum Housing Kit 120 Volt | |
| | 0023 | Painted Die Cast Aluminum Housing Kit 230 Volt Plastic Water Bottle "A" with Cap | |
| | 0027 | Replacement Cap for Water Bottle "A" | |
| 8 | 0026A | Plastic Water Bottle "B" without Check Valve Cap | |
| 9 | 0025 | Plastic Water Bottle "B" with Check Valve Cap | |
| 10 11 | 0027A 0027B | Replacement Check Valve Cap for Water Bottle "B" Replacement Check Valve Cap Baffle Only | |
| 12 | 0004 | Round Beauty Ring | |
| | 0122 | Toggle Switch (3 Pieces) | |
| | 0127 | Red Neon Pilot Light with Lock Ring 120 Volt | |
| 13 | 0128 1125 | Red Neon Pilot Light with Lock Ring 230 Volt Green Lighted Contura Rocker Switch 120 Volt | |
| 10 | 1126 | Green Lighted Contura Rocker Switch 230 Volt | |
| 14 | 0132 | Cord Set (16/3 gauge) with Strain Relief | |
| 15 | 0132B | Cord Strain Relief | |
| 16 | 0028 | Water Cup with 90 Degree Brass Fitting | |
| 17 | 0147 0148 | Internal Wire Set for Models with Front Red Light Internal Wire Set for Models with Green Contura Rocker Switch | |
| ., | 0596 | Heating Unit Kit (wiring included) for Models with Front Red Light | |
| | | - 120 Volt Cord Set and 4" Water Line | |
| | 0177A | Heating Unit Kit (wiring included) for Models with Front Red Light | |
| | 0597 | 230 Volt Cord Set and 4" Water Line Heating Unit Kit (wiring included) for Models with Green Lighted | |
| | 0001 | Rocker Switch - 120 Volt Cord Set and 4" Water Line | |
| | 0597A | Heating Unit Kit (wiring included) for Models with Green Lighted | |
| 10 | 0161 A | Rocker Switch - 230 Volt Cord Set and 4" Water Line | |
| 18 | 0161A | Heating Unit Assembly (no wiring included) – 120 Volt and 4" Water Line | |
| | 0162A | Heating Unit Assembly (no wiring included) | |
| | | - 230 Volt and 4" Water Line | |
| 19 | 0030 | Brass 90 Degree Elbow Joint | |
| 20 | 1130 | 3/8" x 1/4" Straight Brass Fitting for Heating Element Housing. *Beginning in November 2012, this fitting is now cast into the heating element. | |
| 21 | 0591 | Copper Tube (4" length) with Nuts and Compression Rings | |
| | 1191 | Copper Tube (4 1/2" length) with Nuts and Compression Rings | |
| 00 | 0187 | Copper Tube (5" length) with Nuts and Compression Rings | |
| 22 23 | 0160 0195 | L-290 Thermostat Fusible Link Clamp | |
| 24 | 0151 | Fusible Link Wire with Insulated Lug and Clamp | |
| 25 | 0009 | Bottom Plate with Casters | |
| 26 | 0011 | Bottom Plate Casters (Set of 4) | |
| ACCESSOI | 0010 | Screws for Bottom Plate (4 Screws Total) | |
| 28 | 1026 | "I" Kit - 5.5' Hose with Four Attachments | |
| | 1048 | Jiffy Steamer Assembly Wrench | |
| | 0274 | Brass Hat Nozzle Attachment | |
| | 0254 0256 | Metal Head/Wood Handle Hose Attachment Complete Metal Head / Wood Handle Only | |
| | 0269 | Replacement Wooden Handle (for Metal Steam Heads) | |
| | 0262 | Wig Hose Attachment | |
| | 1062 | Steam Cleaning "B" Brush Hose Attachment | |
| | 1063 0899 | Brush Only for the B" Hose Attachment Liquid Cleaner - 3 Ten (10) Ounce Bottles per Package* | |
| | 0033 | *Not Available for Export. | |
| If you don't see the part you need, please contact us. Check pricing at iiffvsteamer.com | | | |

J-1 and J-2 Wiring Diagram

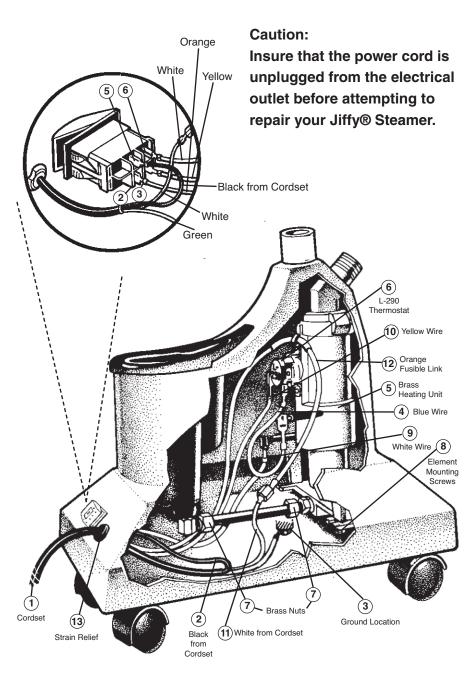

J-1 and J-2 Wiring Instructions

Before attempting any repair on a Jiffy Steamer product, make sure that it is unplugged from the outlet. If you have any questions, please contact our repair department at 1-800-525-4339 between 7:30 AM - 4:00 PM Central Time.

Please note switch terminal 2, 3, 5 and 6 indicated on the enlarged switch diagram are marked on the actual switch. Jiffy® Steamers manufactured before May 2000 are not marked with the terminal switch numbers. Numbers in parenthesis refer to the drawing on page 15.

- Insert cord set (1) into housing and connect black positive wire (2) from cord set to terminal number 5 on the switch.
- 2. Secure with grounding screw ground wire from cord set to the ground location on the housing (3).
- 3. Connect blue wire (4) from the right side of brass heating element (5) to right side of the L-290 thermostat (6).
- 4. Insert brass heating element unit into housing. Hand tighten the brass nuts (7) on the water line to the element and to the 90 degree fitting from the cup. Tighten 2 mounting screws (8) at the base of heating element. Now, use a 5/8" wrench to securely tighten the brass nuts on the water line to the element and to the 90 degree fitting from the water cup. Heating unit may be loosened and adjusted for a better fit if necessary.
- 5. Connect white wire (9) from the left side of the heater unit to terminal number 6 on switch.
- 6. Connect yellow wire (10) from the left side of the thermostat to terminal number 3 on the switch.
- 7. Connect white neutral wire (11) from cord set bundle to orange fusible link with plastic connector (12).
- Connect other end of orange fusible link to terminal number 2 on the switch.
- 9. Set steamer upright and place black plastic strain relief (13) approximately 4 1/2" from end of cord set and insert into housing using pliers.
- 10. Secure bottom plate with four screws.
- 11. To avoid leakage, be sure to tighten hose (or hat nozzle) with wrench before using steamer.